

Fasteners

Wood Screw

ThermaFoam R-Control Wood Screws are used to attach ThermaFoam R-Control Nailbase/Nailstrip to wood structural members and substrates.

- Available in standard* lengths from 3" - 13"

Metal Screw

ThermaFoam R-Control Metal Screws are used to attach ThermaFoam R-Control Nailbase/Nailstrip to lightweight (up to 18 gauge) steel structural members and substrates.

- Available in standard* lengths from 3" - 13"

Concrete Screw

ThermaFoam R-Control Concrete Screws are used to attach Foam-Control Nailbase/Nailstrip to all concrete structural members and substrates. ThermaFoam R-Control Concrete Screws are installed into predrilled 3/16" holes.

- Available in standard* lengths from 3" - 13"

Fluted Concrete Nail

ThermaFoam R-Control Concrete Nails are used to attach ThermaFoam R-Control Nailbase/Nailstrip to poured concrete structural members and substrates. ThermaFoam R-Control Concrete Nails are installed into predrilled 3/16" holes.

- Available in standard* lengths from 3" - 8"

 


FOAM FACTS:

ThermaFoam R-Control Screws and Fluted Concrete Nails.


- Sit tight to the ThermaFoam R-Control Nailbase/Nailstrip surface
- Heat treated steel for high strength and durability
- Coated for superior corrosion resistance
- 6 lobe drive design for screws
- Fluted nail design makes for ease of installation and grab

Wood Screw




Head Style 0.625" Pancake head
 Drive Style T-30, 6 lobe
 Thread/Shank Diameter 0.255" / 0.189"
 Point Style Gimlet Thread

 Concrete Screw



Head Style 0.625" Pancake head
 Drive Style T-30, 6 lobe
 Thread/Shank Diameter 0.255" / 0.189"
 Predrill Hole 3/16" masonry bit

 Metal Screw



Head Style 0.625" Pancake head
 Drive Style T-30, 6 lobe
 Thread/Shank Diameter 0.255" / 0.189"
 Point Style #2 Drill Point

Fluted Concrete Nail



Head Style 0.4375" Pancake head
 Flute/Shank Diameter 0.210" / 0.202"
 Predrill Hole 3/16" masonry bit


Specifications/Installation

Fasteners as shown on plans and in specifications shall be supplied by the ThermaFoam R-Control supplier.

Use ThermaFoam R-Control screws and/or nails per ThermaFoam R-Control recommended installation guidelines. Refer to ThermaFoam R-Control Construction Manuals and Technical Bulletins showing proper design and applications.

ThermaFoam R-Control Accessory Availability

Your nearest ThermaFoam R-Control supplier will be happy to collaborate with you to determine your needs for ThermaFoam R-Control Accessories. For additional information on ThermaFoam R-Control products and to contact your nearest supplier visit www.ThermaFoam R-Control.com.

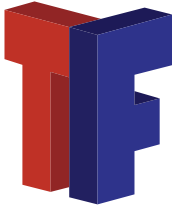

sales@thermafoam.com | www.thermafoam.com



1240 Hwy 77
 Hillsboro, TX 76645

Office: 254-582-2730
 Fax: 254-582-2811